

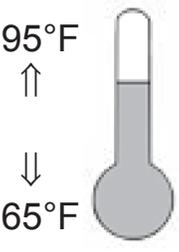
# CBC ECOSpray U

## Universal Resilient Adhesive

Non-flammable Aerosol Adhesive  
 Passes IAQ Standards per CA Sec 01350  
 CRI Green label Plus Approved  
 This product contains 0 "calculated" VOC

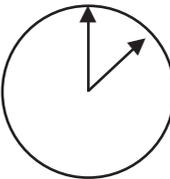
CBC Flooring

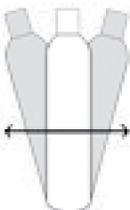
### Instructions for use:

1.  Store indoors away from heat or direct sunlight at a temperature between 65°F and 95°F with the humidity below 65% for 48 hours prior to, during and after the testing and installation.

2.  The substrate must be dry and clean. Remove any foreign matter that would interfere with a good bond. The installation site must be acclimated with HVAC in operation.  
 Do not use on substrates that have been chemically cleaned.

3.  **First Aid:**  
 Avoid contact with eyes and skin. For eye contact, flush thoroughly with water for 15 minutes and get immediate medical attention. For skin contact, wash area with soap and water. If swallowed, do not induce vomiting; get medical attention immediately. If inhaled, remove person to fresh air; for difficulty breathing, get immediate medical attention.

4.  Working time for the adhesive should not exceed 2 hours  
 Keep adhesive free of dust and debris

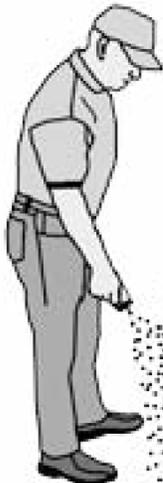
5.  **SHAKE CAN WELL BEFORE EACH USE.**

6.  Use your finger tip to press the nozzle tip

7. **NOTE:**  
 It is up to the end user to determine the coverage that is appropriate for flooring and jobsite conditions. Bond testing prior to the installation will help identify the appropriate application rate, open and working time, and any potential bonding problems to the substrate or flooring.

**For Use with:**  
**LVT & Planks, Sheet Products, Non-PVC Products**  
 Coverage: 140-160 sq. ft. can  
 840-1000 sq. ft. ctn.

**HVT Products**  
 Coverage: 180-200 sq. ft. can  
 1100-1200 sq. ft. ctn.

8.  Point can downwards, press the side of the nozzle tip as you slowly walk back and forth. Do not use a sweeping motion as this may create uneven coverage.  
 When using for LVT, LVP or non-PVC and sheet be sure to achieve full coverage. Double application is recommended on all sheet edges and seam areas.  
 When using on a non-porous substrate, a lighter application may be necessary.  
 May be used on porous or non-porous surfaces such as metal, wood, fiberglass, terrazzo, existing properly prepared vinyl composition tile, and concrete substrates with up to 90% in-situ Relative Humidity as determined per latest version of ASTM F2170, and pH up to 11.0.

9. **SHELF LIFE:**  
 2 years from the manufacturing date, in a properly stored, unused container.

Do not allow product to freeze.

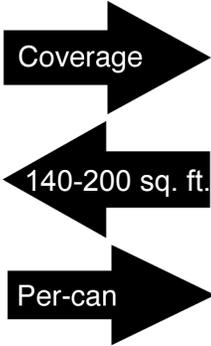
Do not expose to temperatures exceeding 115°F. Prolonged exposure to heat or direct sun may cause container to burst.

**COVERAGE:**  
 Coverage will depend on substrate, and flooring being installed, approximately 140-200 square feet per 22 ounce can.

Coverage

140-200 sq. ft.

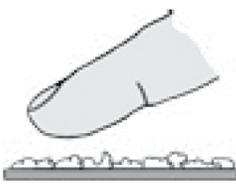
Per-can

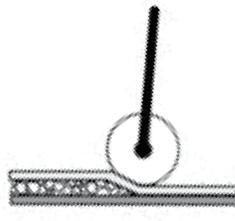


10.  Protect delicate surfaces with a shield made from cardboard or similar material

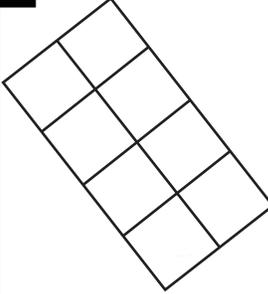
11.  Between uses, clean the spray tip immediately with a clean wet cloth to prevent accumulation of dried adhesive.

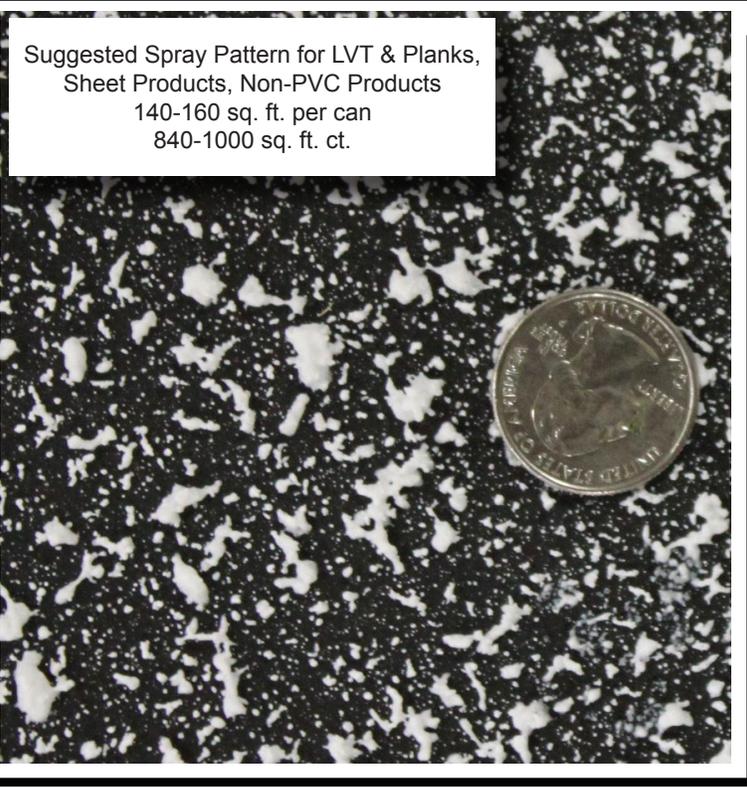
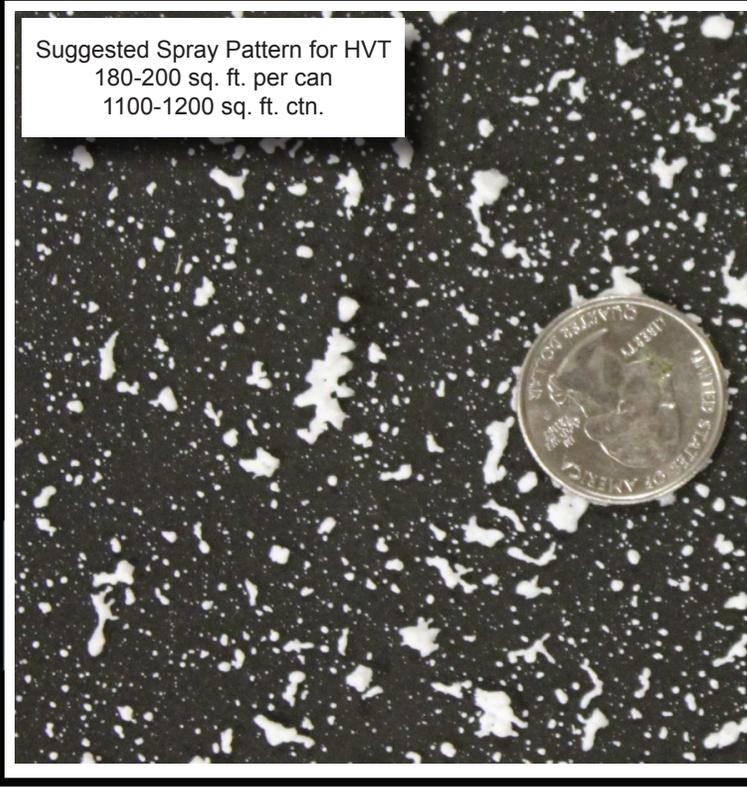
12.  Clean up any drips or overspray with soap and water on a clean cloth. Dried adhesive may require the use of a solvent adhesive cleaner.

13.  Allow the adhesive to dry completely with no transfer to fingers when lightly touched.  
  
Open time will vary depending on the adhesive coverage, substrate porosity and the ambient conditions.

14.  Roll flooring immediately after the installation is complete with an appropriate roller for the flooring type.  
  
Sheet flooring seams may be heat welded immediately after installation.  
  
Normal traffic may be allowed as soon as the installation, finishing and clean-up are complete.

15.  Empty aluminum spray cans should be relieved of excess pressure and recycled or disposed of in accordance with local requirements.

16.  If you are unsure how to determine the coverage rate of the adhesive; mark off the square footage appropriate for the floorcovering and substrate with a chalk line. Apply one full can within the area sectioned off. If your desired coverage is 140-160 square feet per can, mark off a 12 foot by 12 foot section and apply the entire amount of adhesive in the can evenly within that area.



For Technical Data Sheet , MSDS , LEED and expanded usage information contact CBC AMERICA LLC at 919-230-8700 or [www.cbcflooring.com](http://www.cbcflooring.com)